

Change from Pull Trigger to Release Trigger

January 31, 2006

The mechanical switch trigger.



To change the mechanical switch trigger from operating as a “pull” trigger to operate as a “release” trigger, press and hold the button on the switch until the red light (LED) comes on (about 8 to 10 seconds).



Now, the laser will not activate until the switch trigger is released instead of when pressed.