

Change from Pull to Release and back to Pull

Software Version 3.1.0 March 17, 2011) Document Rev: None

The Mechanical Switch Red Box with Trigger Switch plugged in.



Change from Pull to Release Trigger

To change the Mechanical Switch Trigger Assembly from “**pull**” trigger to “**release**” trigger, press and hold the button on the switch until the red light (LED) comes on (about 8 to 10 seconds).



Now, the laser will not activate until the switch trigger is released instead of when pressed.

Change from Release to Pull


To change the mechanical switch trigger back to a “pull” trigger operation, you must do the following. First, **slide** the top cover off to expose the batteries.



Change from Pull to Release and back to Pull

Software Version 3.1.0 March 17, 2011) Document Rev: None

Now you can see the batteries inside the box.

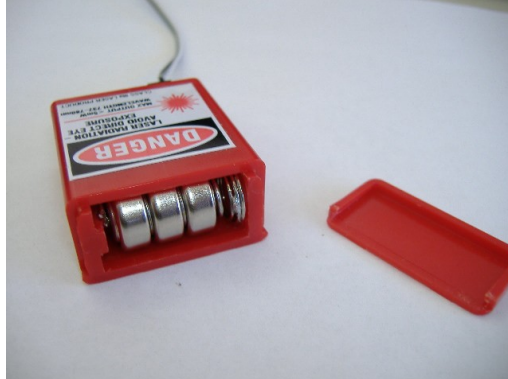

Note that the larger flat side of the batteries face the spring.

Remove the batteries.



Now, with the batteries out of the box and the trigger switch plugged into the red box, press down and hold the trigger switch for about 30 seconds. This process discharges a capacitor through the trigger switch. You may now put the batteries back into the box (remember the flat side of the batteries faces the spring) and slide the cover back on. You may now test it by pressing the trigger switch one time and watch to see if the red light (LED) on the bottom of the red box blinks as you depress the trigger switch down.

The End